

MITEL

8500


Telephone User Guide


 




8500 Telephone Quick Reference Guide

This guide provides information for frequently used features. For more information about these and other features, refer to the user guide. For voice mail information, refer to the voice mail user guide for your system.

Feature Buttons

Most of the following feature codes work when your telephone is idle. However, if you are on an active call or if the telephone is off-hook, you may need to press  (Special) to activate the feature before you enter the feature code.


Button	Action
	Activates features while on active calls.
	Provides volume control. Scrolls through feature options.
	Activates Handsfree Mode and activates features.
	Places the current call on hold.
CALL	Selects an outside line or answers a call.
IC	Answers an intercom (internal) call.
MUTE	Mutes the microphone.
DND	Turns DND mode on or off.
PAGE	Selects a page zone to place a page.
STN SPDL	Accesses Station Speed-Dial numbers.
SYS SPDL	Accesses System Speed-Dial numbers.
REDIAL	Redials a telephone number.
CNF	Places a conference call.
TRANSFER	Transfers the current call.
MSG	Connects to messages.
FWD	Forwards the call to the specified number
ANSWER	Answers calls.
OUTGOING	Selects an outgoing line for external calls.

Commonly Used Feature Codes

Contact your system administrator for more information about system features.

Feature	Code
ACD Agent – Log In/Out	328
Automatic IC Call Access – On/Off	361
Automatic Trunk Call Access – On/Off	360
Background Music – On/Off	313
Call Forward – All Calls	355
Conference	5
Default Station	394
Directory	307
Do-Not-Disturb – On/Off	372
Dynamic Extension Express– On/Off	364
Dynamic Extension Express Handoff	388
Handsfree – On/Off	319
Headset – On/Off	317
Hold – Individual	336
Hold – System	335
Hunt Group – Remove/Replace	324
Message – Cancel Left Message	366
Message – Delete Message	368
Message – Leave Message	367
Microphone Mute – On/Off	314
Page Receive – On/Off	325
Program Buttons	397
Program Station Password	392
Programmable Buttons – Default	395
Queue (Callback) Request	6
Record-A-Call	385
Reverse Transfer (Call Pick-Up)	4
Ring Tone Selection	398
Station Speed Dial	382
Station Speed Dial – Programming	383
Switch Keymap	399
System Forward – On/Off	354
System Speed Dial	381

Answering Calls

Lift the handset, or press  (Speaker) to answer a call while using a headset.

Placing Emergency Calls

Dial the emergency number (911 U.S. or 999/112 Europe). The system immediately places the emergency call as soon as you dial the number, even if you do not select an outside line.

Placing Internal (Intercom) Calls

With or without the handset lifted, dial the extension number. If you enter incorrect digits, you can press the **MUTE** button to move the cursor backward, deleting the last digits entered.

Placing External Calls

Press the **OUTGOING** button or enter the Outgoing Call access code (the default code is **8**), and then dial the number.

Redialing External Numbers

With or without the handset lifted, press the **REDIAL** button. The system automatically selects a line and dials the number.

Transferring Calls to Other Extensions

1. While on the call, press the **TRANSFER** button, and then enter the extension number.
2. Do one of the following:
 - Wait for an answer, announce the call, and then hang up. If the extension is unavailable, press the flashing **IC** or **CALL** button to return to the caller.
 - Hang up to transfer the call and disconnect the call from your telephone.

Using Reverse Transfer

1. Lift the handset, and then press **4**.
2. Dial the extension or hunt group number where the call is ringing or holding.

Forwarding Calls

1. Press the **FWD** button, and then enter the feature code, if applicable.
2. Enter the extension number, or press the **OUTGOING** button or enter the Outgoing Call access code (the default code is **8**), and then dial the telephone number.




Placing Conference Calls

1. While on the first call, press the **CNF** button to place the call on hold.
2. Place a call to the next conference party. For external calls, press the **OUTGOING** button or enter the Outgoing Call access code (**8** is the default code), and then dial the number.
3. After the party answers, announce the conference, and then press the **CNF** button to place the call on hold. If necessary, repeat this step to add the remaining conference party.
4. Press the **CNF** button again to start the conference.

Retrieving Messages

Lift the handset, and then press the **MSG** button. A call is automatically placed to the party or message center that left the message.

Using Do-Not-Disturb

1. Press the **DND** button, and then do one of the following:
 - Press  (Up) or  (Down) to scroll through the messages.
 - Enter the two-digit number for the DND message.
2. Press  (Speaker) or lift and replace the handset.

Placing a Page Announcement

1. Press the **PAGE** button.
2. Enter the page-zone number (**0** to **9**).
3. After the tone, make your announcement, and then hang up.

Notice

This guide is released by Mitel Networks Corporation and provides information necessary to use the 8500 telephone. The guide contents, which reflect current Mitel standards, are subject to revision or change without notice.

Some features or applications mentioned may require a future release and are not available in the initial release. Future product features and applications are subject to availability and cost. Some features or applications may require additional hardware, software, or system administrator assistance.

For sales, service, or technical support, contact your local authorized provider:

Enter provider information above.

If you do not know the contact information for your local provider, use the “Partners” link at the top of the [Mitel home page](http://www.mitel.com) (www.mitel.com) to find a location near you.

If you have any questions or comments regarding this user guide or other technical documentation, contact the Technical Publications Department (USA) at:

tech_pubs@mitel.com

Mitel® is a registered trademark of Mitel Networks Corporation.

All other trademarks mentioned in this document are the property of their respective owners, including Mitel Networks Corporation. All rights reserved.

© 2005-2010 Mitel Networks Corporation

Personal use of this material is permitted. However, permission to reprint/republish this material for advertising or promotional purposes or for creating new collective works for resale or redistribution to servers or lists, or to reuse any copyrighted component of this work in other works must be obtained from Mitel.

Important Safety Instructions and Precautions

Remember the following safety guidelines when using the telephone.





Programming Emergency Numbers

Make sure to do the following when programming emergency numbers and/or making tests to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call.
- Perform tests during off-peak hours such as early morning or late evenings.

Safety Notices

The following notices may appear on the product or in the technical documentation.

Notice	Description
	Caution indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury and/or damage to the equipment or property.
	Warning indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
	Danger indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
	The exclamation point within an equilateral triangle indicates that important operating and maintenance (servicing) instructions are included in the literature accompanying the product.

Maintenance and Repair

There are no user serviceable parts inside the telephones. For repairs, return the telephone to an authorized Mitel provider.

NOTE

Changes or modifications not expressly approved by Mitel may void the user's right to operate the equipment.

Product Disposal Instructions



This symbol indicates that the product is classified as electrical or electronic equipment and should not be disposed of with other commercial or household waste at the end of its working life. For appropriate disposal and recycling instructions, contact your local Mitel provider.

The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) was established by the European Union to minimize negative impact on the environment, control hazardous substances, and curtail landfill expansion by using the best available recovery and recycling techniques.

Software Compatibility

Depending upon which software version your telephone system is using, some of the features included in this guide may not be available for your telephone. Check with your system administrator to see which software version your telephone system currently uses and if there are any feature restrictions for your system.

Telephone Usage

This equipment is not for connection to the telephone network or public coin telephone service. It is only for use when connected to Mitel systems.

WARNING

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of a leak.
- Do not connect directly to the Public Switched Telephone Network (PSTN). Any connection of this telephone to an off premise application, an out of plant application, any other exposed plant application, or to any equipment other than the intended application may result in a safety hazard, and/or defective operation, and/or equipment damage. "Exposed plant" means where any portion of the circuit is subject to accidental contact with electric lighting or power conductors operating at a voltage exceeding 300 volts between conductors or is subject to lightning strikes.
- The socket outlet, if used, shall be located near the equipment and shall be easily located by the user.
- Use only Mitel approved power adaptors.
- The handset supplied with the telephone is not certified for use with any other telephone. Use of the handset with any other telephone may have the potential to cause hearing loss in the event of a lightning strike on the outside plant wiring.

Notice to Canadian Customers

The Class B digital apparatus complies with Canadian ICES-003.

Notice to U.S. Customers

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Notice to European Customers



We, Mitel Networks LTD.
Of, Mitel Castlegate Business Park
Portskewett
Caldicot
NP26 5YR
UK

Mitel Telephone: 8500

Declare that for the hereinafter mentioned product the presumption of conformity with the applicable essential requirements of DIRECTIVE 1999/5/EC OF THE EUROPEAN PARLIAMENT (RTTE DIRECTIVE) AND OF THE COUNCIL is given.

Any unauthorized modification of the product voids this Declaration.

For a copy of the original signed Declaration of Conformity (in full conformance with EN45014), please contact the Regulatory Approvals Manager at the above address.

Contents

Getting Started	1
<hr/>	
Welcome	1
About Your Telephone	2
Feature Descriptions	3
Handset	3
Message Indicator Lamp	3
Volume	3
Programmable Buttons	3
Dialpad Buttons	3
Feature Buttons	4
Telephone Signals	5
Comfort and Safety Tips	5
Headset Instructions	5
Personalizing Your Telephone	7
<hr/>	
Adjusting the Viewing Angle	7
Changing Volume Levels	7
Changing the Ring Tone	8
Listening to Background Music	8
Using Programmable Buttons	9
Default Access Codes	10
Outside Line Access Codes	10
Extension Numbers	10
Default Feature Codes	10
Resetting Programmable Buttons	12
Resetting the Telephone to the Default Settings	13
Switching Keymaps	13
Activating Door Relay	13
Answering and Placing Calls	15
<hr/>	
Answering Calls	15
Answering Waiting Calls	15
Using Automatic Call Access	15
Redirecting Calls	15
Using Automatic Trunk Answer	16

Placing Calls	16
Placing Emergency Calls	16
Placing Internal Calls	16
Requesting a Callback (Queuing the Telephone)	16
Using Camp-on	17
Placing External Calls	17
Redialing a Number	17
Using Speed Dial	18
Using System Speed Dial	18
Using Station Speed Dial	18
Storing Station Speed-Dial Numbers	18
Dialing Station Speed-Dial Numbers	18
Deleting Station Speed-Dial Entries	18
Assigning Speed-Dial Numbers to Programmable Buttons	19
Using Account Codes	19
Call Features	21
Using Handsfree Mode	21
Using Ring Intercom Always	21
Enhanced Speakerphone Mode	21
Using Mute	22
Placing Calls On Hold	22
Entering a Hookflash	22
Transferring Calls	22
Transferring Calls to Other Extensions	23
Transferring Calls to External Numbers	23
Using Reverse Transfer	23
Forwarding Calls	24
Manual Call Forwarding	24
System Forwarding	24
Using Dynamic Extension Express	25
Placing Conference Calls	27
Adding a Conference Party	27
Transferring a Conference	27
Dropping Out of a Conference	27
Ending a Conference and Placing all Parties on Hold	27
Using Record-A-Call	28
Using Group Listen	28
Using Secondary Extension Buttons	29

Using Configuration Assistant	30
Changing Your Station Password	30
Accessing Configuration Assistant	30
Changing the Dynamic Extension Express Settings	31
Changing the DND Settings	31
Changing the Manual Call Forwarding Settings	32
Using Remote Programming	33
Changing the Dynamic Extension Express Settings	33
Changing the DND Settings	34
Changing the Manual Call Forwarding Settings	34
Changing Your Station Password	35
Messages	37

Leaving Messages at Other Extensions	37
Retrieving Messages	37
Canceling Messages Left at Other Extensions	38
Deleting Messages	38
Using Do-Not-Disturb	39
Using Reminder Messages	40
Paging Other System Users	41
Placing a Page Announcement	41
Enabling or Disabling the Page Feature	41
Hunt Groups	43

Logging in to ACD Hunt Groups	43
Logging out of ACD Hunt Groups	44
Stopping the ACD Hunt Group Wrap-up Timer	44
Other Hunt Group Features	44
Requesting Agent Help	44
Diverting Hunt Group Calls	44
Hunt Group Supervisor Features	45
Accepting or Rejecting Agent Help Calls	45
Monitoring Calls	45
Stealing Hunt Group Calls	45
Using Barge-In	46

Contents

Troubleshooting **47**

Contact Information **47**

Troubleshooting Tips **47**

Index **49**

Getting Started

Welcome

The instructions in this guide are for using the Mitel 8500 telephone on the Mitel 5000 Communications Platform (CP). The *Quick Reference Guide* located at the beginning of this guide is an overview of frequently used features.

Your telephone should be powered on and ready to use. If you have any questions on the operation of your telephone, contact your system administrator for assistance.

Because a variety of voice mail products work with the Mitel 5000 CP, this guide does not include voice mail instructions. For voice mail instructions, refer to the voice mail user guide for your system. For example, refer to the *Enterprise Messaging, Basic Voice Mail, and Embedded Voice Mail Card User Guide*, part number 835.3205, or the *Mitel NuPoint Unified Messaging User Guide* on the [Mitel Web site](http://edocs.mitel.com) (<http://edocs.mitel.com>). Contact your system administrator for more information about your voice mail system.

NOTE

Because many telephone features can be programmed to perform various tasks, some features may work differently than the descriptions in this guide. Contact your system administrator for more information.

About Your Telephone

Your telephone is equipped with a Message Indicator lamp and two types of buttons.

- **Dialpad Buttons:** Allow you to enter numbers and letters.
- **Feature Buttons:** Provide quick access to various telephone features.

See “Feature Descriptions” on [page 3](#) for more information about the telephone features



- | | |
|----------------------------|---------------------|
| 1 – Handset | 5 – Special button |
| 2 – Message Indicator lamp | 6 – Dialpad buttons |
| 3 – Volume button | 7 – Feature buttons |
| 4 – Hold button | 8 – Speaker |

Feature Descriptions

The following sections describe default configurations. Your telephone may be programmed differently. Contact your system administrator for more information. See “About Your Telephone” on [page 2](#) for telephone feature locations.

Handset

The handset provided with this equipment is hearing aid compatible (HAC). If you are using Handsfree Mode, you need to lift the handset before speaking.

Message Indicator Lamp

The Message Indicator lamp flashes or stays lit to indicate call, message, and feature activity. See “Leaving Messages at Other Extensions” on [page 37](#).

NOTE

By default, the Message Indicator lamp is lit when you receive new messages. However, this lamp can be programmed for other functions. Contact your system administrator for more information.

Message Indicator lamp signals are described in the following table.

Message Indicator Lamp Signal	Description
Rapidly flashing	You have an incoming call.
Slowly flashing	You have a waiting message or callback message.
On	You are on a call or using a feature.
Off	Your telephone is idle.

Volume

The telephone system has eight volume settings: handset intercom, handset outside call, speakerphone intercom, speakerphone outside call, background music, ringing, handset intercom dial tone, and speakerphone intercom dial tone.

Programmable Buttons






Most of the buttons on your telephone are preprogrammed by the system administrator. However, you can program some of the telephone buttons for quick access to features or speed-dial entries. See “Using Programmable Buttons” on [page 9](#) for instructions.

Dialpad Buttons

Use the dialpad buttons to dial telephone numbers and enter feature codes.

Feature Buttons

Feature buttons provide quick access to commonly used features. See the following table for descriptions.

Button	Action
 (Special)	Activates features while on active calls. Depending on how your system is configured, you may need to press this button before you dial a feature code.
 (Up)  (Down)	Provides volume control for the ringer, handset, and speaker.
 (Speaker)	Activates Handsfree Mode (speakerphone). Activates features.
 (Hold)	Places the current call on hold.
CALL	Selects an outside line or answers a call.
IC	Answers an intercom (internal) call.
MUTE	Mutes the microphone.
DND	Turns DND mode on or off.
PAGE	Selects a page zone to place a page.
STN SPDL	Accesses Station Speed-Dial numbers.
SYS SPDL	Accesses System Speed-Dial numbers.
REDIAL	Redials last external telephone number.
CNF	Places a conference call.
TRANSFER	Transfers the current call.
MSG	Connects to silent and voice messages.
FWD	Forwards the call to the specified number.
ANSWER	Answers calls.
OUTGOING	Selects an outgoing line for external calls.

Telephone Signals

The telephone has several audio and visual signals to indicate feature activity. The following are a few helpful tips:

- Any buttons that are lit or blinking indicate call or feature activity.
- All telephone button lamps illuminate at the same time for a few seconds when the telephone is reset or powered on.
- The following actions may cause an error tone:
 - Pressing an invalid button combination.
 - Selecting a restricted feature.
 - Dialing a restricted or invalid number.
 - Dialing too slowly between digits.
 - Waiting too long before performing the next step.
 To correct an error tone, hang up and try again.
- Many features “time-out” if you wait too long before performing the next step. If this happens, you must start over.
- “Off-hook” means the handset is in use. “On-hook” means the handset is idle.


Comfort and Safety Tips

Observe the following comfort and safety tips when using the telephone:

- **Do not cradle the handset:** Prolonged use of the handset can lead to neck, shoulder, or back discomfort, especially if you cradle the handset between your neck and shoulder. If you frequently use the telephone, you might find a headset more comfortable. See “Headset Instructions” on [page 5](#).
- **Adjust the viewing angle:** The built-in stand tilts to give you a better view of the buttons. See “Adjusting the Viewing Angle” on [page 7](#).
- **Protect your hearing:** Because prolonged exposure to loud sounds can contribute to hearing loss, keep the volume at a moderate level. You can adjust the volume levels of the handset receiver or headset. See “Changing Volume Levels” on [page 7](#).

Headset Instructions

When using a headset, press  (Speaker) to connect to or disconnect from calls.

If you have both a headset and a handset connected to your telephone and you are using the headset, you can quickly transfer audio to the handset by lifting the handset from the cradle. Press  to transfer the call back to the handset before replacing the handset in the cradle.

NOTES

The headset must be HAC.

If your headset has a power-saver mode, make sure the system administrator has enabled the “Headset Connect Tone” feature. If this is not enabled, you may miss the first few seconds of an incoming call.

To connect and activate the headset:

1. Insert the headset jack into the Headset port located on the back of the telephone.
2. Dial **317** to turn the headset on.

To disable Headset mode and activate the handset and speakerphone:

Dial **317**. The handset or speakerphone is now activated.

Personalizing Your Telephone

This chapter describes features you can use to personalize your telephone.

Adjusting the Viewing Angle

You can tilt the telephone stand for a better view of the buttons.

To adjust the viewing angle:

1. Position the bottom of the telephone base on a flat surface.
2. Tilt the telephone to the desired angle.
3. Place the “feet” of the support mechanism in the holes on the base to secure the position of the telephone.



Changing Volume Levels

You can change the following volume levels:

- Ringer (alerting tone)
- Handset
- Headset
- Background music
- External speaker

You must be using the feature to change the volume level. For example, if you want to change handset volume level, you must be using the handset. However, you can adjust the ringer (alerting tone) volume level when the telephone is idle.




To change a volume level:

1. While using the feature, press  (Up) to increase the volume, or press  (Down) to decrease the volume.
2. Press the center of the button to save the setting.

Changing the Ring Tone

You can select one of nine different ring tones.

To change the ring tone:

1. With the handset on-hook, dial **398**.
2. Do one of the following to listen to (or turn off) ring tones:
 - Press **0** to turn the ringer off.
 - Press  (Up) or  (Down) or **1 to 9** to listen to ring tones.
3. Press  (Speaker), **#**, or lift and replace the handset to select the ring tone.

Listening to Background Music

If your system is equipped with a music source, you can listen to Background Music or system audio (for example, organizational conference calls) through the external speaker.

To turn background music on or off:

Dial **313** (on/off toggle).

Using Programmable Buttons

For quick access, you can assign feature codes, extensions, speed-dial numbers, trunks, or other resources to your programmable buttons. You can then press the programmed buttons to activate features or place calls. See “[Default Access Codes](#)” and “[Default Feature Codes](#)” on [page 10](#) for code lists. You cannot reprogram the default button assignments. See “[Programmable Buttons](#)” on [page 3](#).

To program a button:

1. With the handset on-hook, dial **397**.
2. Press the button that you want to program.
3. Enter the feature code, extension number, station speed-dial number, or system speed-dial number to be assigned to the button. To assign speed-dial numbers to programmable buttons, see “[Assigning Speed-Dial Numbers to Programmable Buttons](#)” on [page 36](#)

NOTE

Before or after assigning the speed-dial number to a programmable button, make sure the speed-dial number has either a Station Speed Dial bin or System Speed Dial location assigned to it. For System Speed Dial numbers, numbers are pre-assigned to the System Speed Dial locations (000 to 999 or 0000 to 4999) by your system administrator. Therefore, you just need to choose a System Speed Dial location that you want to use (see “[Using System Speed Dial](#)” on [page 18](#) for details). For Station Speed Dial numbers, you must manually store numbers in the Station Speed Dial bins (0 to 9). See “[Storing Station Speed-Dial Numbers](#)” on [page 18](#).

After you program a button, you can:

- Press the button to place a call to the assigned extension.
- Press the button and then hang up to transfer a call to the assigned extension. If the call is transferred to voice mail you hear repeating double tones.
- Visually monitor the call activity of the assigned extension if the button you assign has a lamp.

The following table describes the lamp signals and the indicated call activity for a DSS/BLF key (station speed-dials do not show status):

Lamp Signals	Description
Continuously Lit	The extension is busy or off-hook.
Slowly flashing	The extension is in Do-Not-Disturb (DND).
Quickly flashing	The extension has a call ringing in.
Continuously flashing	The extension is causing a “Station Off-Hook” system alarm.

Default Access Codes

The following are default system access codes. If your system uses different codes, record the codes in the “New Code” column for reference.

Outside Line Access Codes

Code Type	Code	New Code
Emergency Call	911 (999/112 Europe)	
Outgoing Call (Default)	8	
Select Line Group 1 to 208	92001 to 92208	
Automatic Route Selection	92000	

Extension Numbers


Code Type	Code	New Code
Attendant	0	
Telephone Extensions	1000 to 1999	
Hunt Groups	2000 to 2299	

Default Feature Codes

The following table lists default feature codes.¹ If your system administrator changes any of the default codes, you can record the new codes for reference in the “New Code” column.

NOTE	Most of the following feature codes work when your telephone is idle. However, if you are on an active call or if the telephone is off-hook, you may need to press ∞ (Special) before you enter the feature code to activate the feature.
-------------	---

To delete the characters entered:

Press  (Hold) to move the cursor to the left and delete the characters entered.

To cancel the feature:

Press *.

Feature	Page	Code	New Code
Account Code – Follow Calls	19	391	
Account Code – Optional	19	390	
ACD Agent – Log In	43	326	
ACD Agent – Log In or Log Out	43	328	
ACD Agent – Log Out	43	327	
ACD Agent – Wrap-up Terminate	44	329	
Activate Door Relay	13	332	
Agent Help – Reject	44	376	

1. These features shown may or may not be enabled for your system.

Feature	Page	Code	New Code
Agent Help – Request	44	375	
Answer Ringing Call	15	351	
Automatic IC Call Access – On and Off	15	361	
Automatic Trunk Call Access – On and Off	15	360	
Automatic Trunk Answer	24	350	
Background Music – On and Off	8	313	
Barge-In	46	386	
Call Forward – All Calls	24	355	
Call Forward – If Busy	24	357	
Call Forward – If No Answer	24	356	
Call Forward – No Answer/Busy	24	358	
Conference	27	5	
Default Station	13	394	
Do-Not-Disturb	39	370	
Do-Not-Disturb – Cancel	39	371	
Do-Not-Disturb – On and Off	39	372	
Do-Not-Disturb – Override	39	373	
Dynamic Extension Express On	25	363	
Dynamic Extension Express Off	25	362	
Dynamic Extension Express On/Off	25	364	
Dynamic Extension Express Handoff	25	388	
Group Listen	28	312	
Handsfree – On and Off	21	319	
Headset – Off	5	316	
Headset – On	5	315	
Headset – On and Off	5	317	
Hold – Individual	22	336	
Hold – System	22	335	
Hookflash (Recall in Europe)	22	330	
Hunt Group – Remove	44	322	
Hunt Group – Remove/Replace	44	324	
Hunt Group – Replace	44	323	
Message – Cancel Left Message	38	366	
Message – Delete Message	38	368	
Message – Leave Message	37	367	
Microphone Mute – On and Off	22	314	
Page	41	7	

Feature	Page	Code	New Code
Page Receive – On/Off	41	325	
Page Receive – On and Off	41	325	
Program Buttons	9	397	
Program Station Password	33	392	
Programmable Buttons – Return to Default	12	395	
Queue (Callback) Request	16	6	
Record-A-Call	28	385	
Redial	17	380	
Redirect Call	15	331	
Reminder Message	40	305	
Reminder Message – Cancel	40	306	
Remote Programming	33	359	
Reverse Transfer (Call Pick-Up)	23	4	
Ring Intercom Always – On and Off	21	377	
Ring Tone Selection	8	398	
Station Monitor	45	321	
Station Speed Dial	18	382	
Station Speed Dial – Programming	18	383	
Steal Call	45	387	
Switch Keymap	13	399	
System Forward – Off	24	353	
System Forward – On	24	352	
System Forward – On and Off	24	354	
System Speed Dial	18	381	
Transfer To Hold	22	346	
Transfer To Ring	22	345	

Resetting Programmable Buttons

You can reset programmed buttons to the default assignments. Resetting the programmable buttons does not reset button assignments programmed by the system administrator.

To reset the feature buttons to the default values:

With the handset on-hook, dial **395**.

Resetting the Telephone to the Default Settings

Resetting the telephone to the default settings does the following:

- Returns all volume settings to the default levels. See “Changing Volume Levels” on [page 7](#).
- Cancels Background Music. See “Listening to Background Music” on [page 8](#).
- Cancels Callback (queue) requests. See “Requesting a Callback (Queuing the Telephone)” on [page 16](#).
- Restores Handsfree Mode. “Using Handsfree Mode” on [page 21](#).
- Cancels Manual Call Forwarding. See “Manual Call Forwarding” on [page 24](#).
- Cancels System Forwarding. See “System Forwarding” on [page 24](#).
- Cancels Do-Not-Disturb (DND). See “Using Do-Not-Disturb” on [page 39](#).
- Restores Page settings. See “Paging Other System Users” on [page 41](#).
- Resets hunt group calls. See “Hunt Groups” on [page 43](#).

To return your telephone to the default settings:

Dial **394**.


Switching Keymaps

Keymaps are the default button assignments on your telephone. Your system administrator may have programmed an alternate keymap, allowing you to switch between keymap assignments. Contact your system administrator for more information.

To switch between keymaps when your telephone is idle:

With the handset on-hook, dial **399**.

To switch between keymaps during a call:

Press  (Special), and then dial **399**.

Activating Door Relay

If the Activate Door Relay feature is enabled, you can unlock a door (i.e., “buzz” it open) through your telephone.

You can enter the Activate Door Relay feature code while idle or while on a call. This allows you to activate the feature while talking to a communications device mounted at the door without first having to hang up. When activated while on a call, the feature will not affect the call in progress.

You can add the Activate Door Relay feature to a phone keymap button, just like any other station feature.

To unlock a door:

While idle or while on a call, dial **332**. The door is unlocked.

Answering and Placing Calls

The following instructions describe how to answer and place internal and external calls and how to use related features.


NOTE

By default, internal (intercom) calls are assigned to the **IC** button, and external calls are assigned to the **CALL** buttons.

Answering Calls

Your telephone may be preset to automatically answer incoming internal calls in Handsfree Mode. To disable Handsfree Mode, see “Using Handsfree Mode” on [page 21](#). After disabling Handsfree Mode, you can use your handset or headset to answer incoming calls.

To answer a call:

Lift the handset, or press  (Speaker) to answer a call while using a headset, or to answer a call in Handsfree Mode. See “Using Handsfree Mode” on [page 21](#).

If you are currently on a call, press the flashing **IC** or **CALL** button to answer a waiting call. See “Answering Waiting Calls” below.


Answering Waiting Calls

If you receive a call while you are on another call, you hear a “call waiting” tone, the **IC** or **CALL** button flashes.

To answer a waiting call:

Press the flashing **IC** or **CALL** button. This action hangs up on the connected call and connects you to the waiting call. You can also place the first call on hold before you answer the waiting call. See “Placing Calls On Hold” on [page 22](#).

Using Automatic Call Access

Automatic Call Access connects you to incoming internal or external calls when you pick up the handset or press  (Speaker). When Automatic Call Access is turned off, you must press the flashing **IC** or **Call** button to answer incoming calls.

To use Automatic Call Access for incoming IC calls:

With the handset on-hook, dial **361** (on/off toggle).

To use Automatic Call Access for incoming external (trunk) calls:

With the handset on-hook, dial **360** (on/off toggle).

Redirecting Calls

You can redirect incoming calls to other extensions, external numbers, or send a DND message (see [page 39](#)).

To redirect calls:


1. While a call is ringing, dial **331**.
2. Do one of the following:
 - Dial the extension number, or press the **Outgoing** button or the Outgoing Call access code (the default code is **8**), and then dial the external number.
 - Enter the DND code.

Using Automatic Trunk Answer

You can use Automatic Trunk Answer to answer incoming external calls for other internal parties who are members of an “Answer Access” list.¹ Your system administrator creates Answer Access lists. Contact your system administrator for Answer Access list extensions.

Automatic Trunk Answer answers calls in the order they are received (that is, the first call received by any extension in the Answer Access list is the first one answered).

To use Automatic Trunk Answer:

1. When an incoming external call is ringing at another Answer Access list extension, lift the handset or press  (Speaker).
2. Dial **350** or press the flashing **Trunk** *<number>* button.

Placing Calls

The following instructions describe how to place calls and use related features.

Placing Emergency Calls

To place an emergency call:

Dial the emergency number (911 U.S. or 999/112 Europe). The system immediately places the emergency call as soon as you dial the number, even if you do not select an outside line.

Placing Internal Calls

Internal calls are calls placed to other extensions in the system. Internal calls are assigned to the Intercom (IC) button on your telephone. Contact your system administrator for a list of extension numbers.

To place an internal call:

1. With or without the handset lifted, dial the extension number.
2. If you are using Handsfree Mode, listen for the double tone and then begin to speak.


If there is no answer or if the extension is busy, you can do the following:

- Request a callback (queue). See [Requesting a Callback \(Queuing the Telephone\)](#) below.
- Camp-on to the busy extension. See “Using Camp-on” on [page 17](#).
- Leave a message. See “Leaving Messages at Other Extensions” on [page 37](#).

Requesting a Callback (Queuing the Telephone)

When you request a callback (queue the telephone), the system automatically calls to connect you to the extension when it becomes available.

To request a callback:

If there is no answer or if the extension is busy, press  (Special) followed by **6**, and then hang up. When the extension becomes available, your extension rings.

To cancel the callback request:

Press **6**.

¹ This feature may or may not be enabled for your system.

Using Camp-on

Camp-on keeps you connected to the called extension until it becomes available. You cannot use Camp-on if the called extension is in DND, or if the call is forwarded to voice mail. See “Using Do-Not-Disturb” on [page 39](#).

To use Camp-on:

Stay on the line and wait for the extension to become available—do not hang up. If Camp-on is enabled, you hear Music-on-Hold while you are waiting.

Placing External Calls

The following sections describe features used when placing external calls.

To place an external call:

1. Press the **OUTGOING** button, an unlit **CALL** button, or enter the Outgoing Call access code (the default code is **8**).
2. Dial the number.

NOTES

If you cannot place an external call because all outgoing lines are busy, you can request a callback, which prompts the system to contact you when a line becomes available. See “Requesting a Callback (Queuing the Telephone)” above.

If you are prompted for an account code (indicated by a single beep), you must enter an account code before you can place your call. See “Using Account Codes” on [page 19](#).

Depending on system configuration, you may also be able to use one of the following methods to select an outgoing line:

- Enter the Select Line Group feature code. The default codes are 92001 to 92208.
- Enter the Automatic Route Selection (ARS) feature code. The default code is 92000.

Contact your system administrator for more information about using Select Line Group or ARS access codes.

Redialing a Number

You can quickly redial the last *external* number dialed. Although most phones are programmed to redial the last number dialed, your system administrator can program your telephone to redial the last number saved. You cannot redial extension numbers.

To use Redial:

With or without the handset lifted, press **REDIAL**. The system automatically selects a line and dials the number.

To use the Last Number Saved feature:

- *To save the last number dialed:* While the telephone is idle or while listening to intercom dial tone, press the **REDIAL** button.
- *To redial the saved number:* After selecting a line, press **REDIAL**. The number is redialed.

Using Speed Dial

You can use speed dial to quickly dial stored telephone numbers. Speed-dial numbers are either stored in the system (System Speed Dial), or in your telephone (Station Speed Dial).

Using System Speed Dial

Your system administrator assigns Speed-Dial location numbers, which are available to everyone in the system. Contact your system administrator for more information.

To Dial System Speed-Dial numbers:

1. Dial **381** and then enter the speed-dial location (**000 to 999** or **0000 to 4999**).
2. Press **#** to dial the number.

Using Station Speed Dial

You can use Station Speed Dial to store telephone numbers for your personal use. Other system users do not have access to your Station Speed-Dial numbers.

Storing Station Speed-Dial Numbers

You can store up to 10 Station Speed-Dial numbers.

To store a Station Speed-Dial number:

1. With the handset on-hook, dial **383**.
2. Enter the speed-dial location (**0 to 9**).
3. Enter the number of the speed-dial contact (up to 16 characters).
4. Press **#** to save the number.

Dialing Station Speed-Dial Numbers

To dial a Station Speed-Dial number:

Dial **382**, and then enter the Station Speed-Dial location number (**0 to 9**). The system dials the number.

NOTE

You can also program buttons to dial Station Speed-Dial numbers. See “Assigning Speed-Dial Numbers to Programmable Buttons” on [page 19](#).

Deleting Station Speed-Dial Entries

To delete a Station Speed-Dial entry:

1. With the handset on-hook, dial **383**.
2. Enter the speed-dial location (**0 to 9**).
3. Program a new number for the location code or press **#** to exit.

Assigning Speed-Dial Numbers to Programmable Buttons

You can assign Station or System Speed-Dial numbers to your programmable buttons. Before assigning the speed-dial number to a programmable button, make sure the number has either a Station or System Speed-Dial code assigned to it.

To program a Station Speed-Dial button:

1. Lift the handset, and dial **397**.
2. Press the button that you want to program.
3. Dial **382**.
4. Enter the speed-dial bin (**0 to 9**).

To program a System Speed-Dial button:

1. Lift the handset, and dial **397**.
2. Press the button that you want to program.
3. Dial **381**.
4. Enter the speed-dial location (**000 to 999** or **0000 to 4999**).

 
Using Account Codes

Account codes record information for phone record reports. You may be required to enter account codes when placing calls. Contact your system administrator for more information about using account codes.

There are three types of account codes:

- **Standard account codes:** Automatically entered into the phone record report whenever you place a call.
- **Forced account codes:** Entered before you can place an outside call.
- **Optional account codes:** Entered at any time during a call.

To enter an optional account code:

1. While off-hook, press  (Special), and then dial **390**.
2. Enter the optional account code, and then press **#**.

To set an account code for all calls placed from your telephone:

Dial **391** followed by the account code, and then press **#**. This code is used for all calls made from your telephone until it is disabled.

To disable the code:

Dial **391**, and then press **#**.

Call Features

The following sections describe call-related features.

Using Handsfree Mode

You can use Handsfree Mode to activate the speaker after you lift the handset.

NOTES

The Ring Intercom Always feature prevents calls from being answered in Handsfree Mode (see the following section).

You cannot use Handsfree Mode if you are using a headset, or if you have more than one telephone assigned to an extension number.

To use Handsfree Mode:

With the handset on-hook, dial **319** (on/off toggle).

Using Ring Intercom Always

If another extension has Handsfree Mode enabled for incoming internal calls (see the previous section), you can use Ring Intercom Always to override Handsfree Mode on the extension, requiring the called party to pick up the handset to answer your call.

To override Handsfree Mode for the current call:

1. Before you enter the extension number, press **#**.
2. Dial the extension number.

To use Ring Intercom Always to always send non-handsfree calls:




With the handset on-hook, dial **377** (on/off toggle).

Enhanced Speakerphone Mode

The Enhanced Speakerphone Mode¹ improves transmission quality while on a speakerphone call over a limited volume level (the range is typically 1 to 3).

To enable enhanced speakerphone mode while on a call:

Do one of the following:

- Press  (Special), and then press  (Speaker).
- Press  (Special), and then dial **310**. The speakerphone returns to standard mode when you end the call.

There will be about one second of white noise while the speakerphone circuitry is calibrated to the call. Both parties should avoid speaking during this white noise.

NOTE

On some long-distance calls the outside party may hear their own echo when speaking. If the amount of echo is objectionable, do not use the Enhanced Speakerphone Mode.

1. This feature may or may not be enabled for your system.

Using Mute

You can use Mute to temporarily turn off your microphone, preventing the other party on the call from hearing you.

To mute or unmute the microphone:


While on a call, press the **MUTE** button. When the microphone is muted, the Mute button lamp is lit. Press the **MUTE** button again to turn the microphone back on.

Placing Calls On Hold

 
You can place calls on either Individual Hold or System Hold.

- **Individual Hold:** Places an internal or external call on hold at your telephone.
- **System Hold:** Places an external call on hold in the system. You can then pick up the call from any telephone that indicates a flashing Call button for the call, including the telephone that placed it on hold.

To place a call on Individual Hold:

1. Press  (Hold).
2. Hang up or place another call.



To place an outside call on System Hold:

1. Press  (Special), and then dial **335**.
2. Hang up or place another call.

To place a call on hold and answer a waiting call:

Press  (Hold), and then press the flashing **IC** or **Call** button.


To return to a call that is on hold:

Press  (Hold), and then lift the handset or press  (Speaker).

Entering a Hookflash

Some telephone companies require you to enter a hookflash (a quick hang up and release) for feature access.

To enter a hookflash:

While off-hook, press  (Special), and then dial **330**.

Transferring Calls

You can transfer calls to other extensions or external numbers. You can also transfer conference calls. See “Transferring a Conference” on [page 27](#).

NOTE

If your system administrator has enabled Transfer-on-Connect for your telephone, you are automatically connected to calls transferred to your extension after the transferring party hangs up. If this option is turned off, you must press a **Call** button to answer calls transferred to your extension.

Transferring Calls to Other Extensions

To transfer a call to another extension:

1. While on the call, press the **TRANSFER** button, and then dial the extension number.
2. Do one of the following:
 - Wait for an answer, announce the call, and then hang up. If the extension is unavailable, press the flashing **IC** or **CALL** button to return to the caller.
 - Hang up to transfer the call and disconnect the call from your telephone.

NOTE

If your system administrator has enabled the Transfer-on-Connect Allowed feature for your telephone, you are automatically connected to calls transferred to your extension after the transferring party hangs up. If this option is turned off, you must press an **IC** or **Call** button to answer calls transferred to your extension.

Transferring Calls to External Numbers

To transfer a call to an external number:

1. While on the call, press the **TRANSFER** button.
2. Press the **OUTGOING** button or the Outgoing Call access code (the default code is **8**) to select an outside line.
3. Dial the telephone number.
4. Do one of the following:
 - Wait for an answer, announce the call, and then hang up. If the extension is unavailable, press the flashing **CALL** button to return to the caller.
 - Hang up to transfer the call and disconnect the call from your telephone.

Using Reverse Transfer

You can use Reverse Transfer (Call Pick Up) to answer calls that are ringing or holding at other extensions. For example, if you receive a call while you are away from your desk, you can pick up the call from another extension.

To use Reverse Transfer:

1. Lift the handset, and then press **4**.
2. Dial the extension or hunt group number or press a DSS/BLF key where the call is ringing or holding. The call is transferred to the telephone you are using and you are connected to the caller.

Forwarding Calls

You can use Manual Call Forwarding or System Forwarding to forward calls.

Manual Call Forwarding

You can use Manual Call Forwarding to send incoming calls to another extension or external number. The following table describes Manual Call Forwarding options.

Call Forward Feature	Description	Code
Call Forward All Calls	All incoming calls are forwarded.	355
Call Forward if no Answer	All incoming calls are forwarded if not answered. (The timer is set by the system administrator.)	356
Call Forward If Busy	When your telephone is busy, all incoming calls are forwarded without ringing.	357
Call Forward If No Answer/Busy	All incoming calls are forwarded if your telephone is busy or if you do not answer.	358

To use Manual Call Forwarding:

1. Press **FWD**.
2. Enter the extension number, or press the **OUTGOING** button, and then dial the telephone number.

To cancel a Manual Call Forwarding request:

Do one of the following:

Press the **FWD** button, and then press  (Speaker), or lift and replace the handset.

NOTE

If the Configuration Assistant feature is enabled for your system, you can access a voice guided configuration portal that provides easy-to-use, remote access to the Call Forwarding feature. See [page 30](#) for details.

System Forwarding

You can use System Forwarding to route calls based on the type of call and the idle or busy status of your telephone. You cannot program the System Forward destination. You can only turn it on or off. Contact your system administrator for more information.

To turn System Forwarding on or off:

Dial **354** (on/off toggle).

Using Dynamic Extension Express

When you enable Dynamic Extension Express on your telephone, your incoming calls are automatically routed to one or more preprogrammed associated destinations according to the routing steps programmed for you.

Typically, your desk phone is configured to be your main extension. You may be programmed for up to five associated destinations including:

- softphone
- home IP phone
- voice mail
- mobile phone
- home phone

Your desk phone, softphone, home IP phone, and voice mail extensions are already programmed in the system, so your system administrator can easily include them in your routing steps. To include your mobile and home phone numbers in your routing steps, you will need to provide these numbers to your system administrator.

Dynamic Extension Express also includes the Handoff feature, which includes the following functions:

- **Push:** The Handoff “push” function allows you to move an active call from your main extension, typically your desk phone, to an associated destination without disconnecting audio. The push function is useful if you are leaving the work area, but want to remain connected to an active call. The push function rings all associated destinations (except voice mail) and you select which device to use to answer the call. When you answer the call, you are immediately connected to the other parties at the new destination. When the call is switching over to the new destination, there may be a momentary break in audio, which may be noticeable to the other parties on the call.
- **Pull:** The Handoff “pull” function allows you to pull a call that was previously routed to your mobile or home phone back to the main extension. The pull function is useful if you answer a call on your mobile phone and then return to your desk. After you pull a call back to the main extension, the call is connected immediately and you can then access system features such as conference, hold, and transfer.

NOTE

The Handoff feature is only supported on your main extension, typically your desk phone. However, if you share a desk phone with one or more coworkers and your main extension is a phantom extension, you cannot use the Handoff feature.

Dynamic Extension Express includes the following feature codes:

- Dynamic Extension Express On: **363**
- Dynamic Extension Express Off: **362**
- Dynamic Extension Express On/Off: **364**
- Dynamic Extension Express – Handoff (push and pull): **388**

The following call types do not follow Dynamic Extension Express:

- Hunt group calls
- Hunt group announcement/overflow calls
- Transfer recalls, Hold recalls, Conference recalls, and Attendant recalls

NOTE

A recall occurs when a feature cannot be completed or the feature times out, and the call returns to the originating extension. For example, a holding call will recall the extension where it was placed on hold when the hold timer expires.

When you enable Dynamic Extension Express, your incoming calls are routed as specified by the routing type programmed for you by your system administrator. The table below provides descriptions for the default routing types.

Routing Type	Description
Mobile Twinning	Calls simultaneously ring your desk phone and mobile phone, before going to voice mail.
Delayed Mobile Twinning	Calls ring your desk phone first, and then ring both your desk phone and mobile phone, before going to voice mail.

Check with your system administrator to see which routing type has been programmed for you. Your administrator can modify these routing types by adding or removing routing steps, adding or removing destinations, and changing the ring timers, if required.

To ensure that calls are routed correctly to your mobile and home phones, inform your system administrator if either of these phone numbers change.

To enable Dynamic Extension Express:

Dial **363** or **364**.

To disable Dynamic Extension Express:

Dial **362** or **364**.

To answer a call routed to your mobile or home phone:

1. Answer the call when it rings your telephone. After you speak, the Dynamic Extension Express prompt is played.
2. Do one of the following:
 - Press # to accept the call.

NOTE

You do not need to wait for the prompt to accept the call. You can accept the call immediately by pressing the # button.

- Press * to send the call to the voice mailbox associated with your main extension (not your mobile phone or home phone voice mailbox). If you do not have a voice mailbox, the “Press *...” prompt is not played and the call is routed to your main extension.

If you hang up, the call continues to follow your programmed routing steps.

To use the Dynamic Extension Express – Handoff “push” feature:

1. While on an active call at your telephone, press ∞ (Special), and then dial **388**. The call rings all of your associated destinations (except voice mail).
2. Answer the call at one of your associated destinations. For mobile and home phones, press # to accept the call.

To use the Dynamic Extension Express – Handoff “pull” feature:

While on an active call on an associated destination device, lift the telephone handset and dial **388**. A confirmation tone is played and the call is pulled back to your telephone.

NOTE

If you enter the handoff feature code (388) and hear reorder tone, the call cannot be handed off (see [page 48](#)).

To cancel the Dynamic Extension Express – Handoff feature:

While the handoff is in-progress, press ∞ (Special), and then dial **388**.

Placing Conference Calls

You can place a conference call with up to three internal or external parties, for a total of four parties, including yourself.

To place a conference call:

1. While on the first call, press the **CNF** button to place the call on hold.
2. Place a call to the next conference party. For external calls, press the **OUTGOING** button or the Outgoing Call access code (the default code is **8**), and then dial the number.
3. After the party answers, announce the conference, and then press the **CNF** button to place the call on hold. If necessary, repeat this step to add the remaining conference party.
4. Press the **CNF** button again to start the conference.

Adding a Conference Party

You can add a conference party during the conference.

To add a conference party:

1. Press the **CNF** button. This leaves the conference parties connected.
2. Place a call to the party to be added to the conference, and then announce the conference. Press the **CNF** button twice to add the party and rejoin the conference.

Transferring a Conference

You can transfer an existing conference to another extension.


To transfer a conference:

1. During the conference, press the **TRANSFER** button, and then dial the extension number.
2. Announce the conference (if desired), and then hang up. The party must then press the flashing **CNF** button to connect to the conference.

Dropping Out of a Conference

You can drop out of a conference and return to the conference later.

To drop out of a conference:

Press the **CNF** button or  (Hold), and then hang up. This removes you from the conference but leaves the other parties connected.


To return to the conference:

Press the flashing **CALL** button, and you are reconnected to the conference.


Ending a Conference and Placing all Parties on Hold

You can end a conference and place all conference parties on Individual Hold, allowing you to toggle between the held parties and speak to one party at a time.

To end a conference and place all parties on Individual Hold:

Press the **CNF** button, and then press  (Hold).

To toggle between the held callers:


Press  (Hold) twice for internal parties or the flashing **CALL** button for external parties.

Using Record-A-Call

You can use Record-A-Call to record an ongoing call as a mailbox message.² You can then retrieve the message from your voice mailbox. The Record-A-Call feature stays active after the other party hangs up, so you can add to the recorded call with your own message.

NOTE Record-A-Call is not supported on peer-to-peer (P2P) calls. Contact your system administrator for more information.


To use Record-A-Call:

1. While on a call, press  (Special), and then dial **385** to turn Record-A-Call on.
2. Enter the voice mailbox number where you want the recording saved. Both you and the calling party hear a confirmation tone (if enabled).

NOTE If your system administrator assigns the Record-a-Call voice mailbox destination, you do not need to enter the voice mailbox number.




To stop Record-A-Call:

Do one of the following:


- Press  (Special), and then dial **385**.
- Hang up.

Using Group Listen

You can use Group Listen to activate the speaker while you use the handset or headset to continue speaking. This allows other people to hear the other party on the call while the other party can only hear you (through the handset microphone). You cannot use Group Listen in Handsfree Mode.

NOTE If are using the handset, the  (Speaker) button lamp is unlit, even though the speaker is on. However, if you are using a headset, the  (Speaker) button lamp is lit. If you press  (Speaker) while on either the handset or headset you disconnect the call.

To use Group Listen:

While on a call, press  (Special), and then dial **312**. You hear a confirmation tone. (The other party does not hear the confirmation tone.) Dial **312** again to turn Group listen off.

² This feature may or may not be enabled for your system.

Using Secondary Extension Buttons

You can use programmable buttons as Secondary Extension buttons.³ Secondary Extension buttons are assigned to other extensions in the system (primary extensions). Because Secondary Extension buttons are programmed by the system administrator, you cannot change the buttons (for example, assign features to the buttons).

When programmed, you can use Secondary Extension buttons to:

- Place an internal call to the primary extension.
- Transfer calls to the primary extension.
- Answer a call that is ringing or holding on any **CALL** button at the primary extension.

NOTES

Unless internal calls are set up by the system administrator to use **CALL** buttons, you cannot use Secondary Extension buttons to answer ringing or holding internal calls received by the primary extension.

You can use Secondary Extension buttons to notify you when a given number of calls are waiting at the primary extension.

If a Secondary Extension button is flashing (the primary extension has an incoming call), you can press **#** before pressing the flashing Secondary Extension button to call the primary extension and not answer the incoming call.

3. Secondary Extension buttons must be programmed by your system administrator.

Using Configuration Assistant

If Configuration Assistant is enabled for your system, you can access this voice guided configuration portal that provides easy-to-use, remote access to the following phone configuration options:

- Dynamic Extension Express (see below)
- DND (see [page 31](#))
- Manual Call Forwarding (see [page 32](#))

NOTE

You need a Configuration Assistant extension number to use this feature. Contact your system administrator for more information.

Changing Your Station Password

Before using Configuration Assistant, Mitel recommends that you change your default Station password to something more secure.

To change your Station password:

1. Dial **392**.
2. Enter your current password (the default password is your extension number), followed by **#**.
3. Enter the new password followed by **#**.
4. Enter the new password again followed by **#**.

To change the password from another phone, see “Changing Your Station Password” on [page 35](#).

Accessing Configuration Assistant

Follow the instructions below to access Configuration Assistant.

To access Configuration Assistant:

1. Access the Configuration Assistant extension number from inside or outside the system by:
 - dialing it from any phone in the system.
 - being transferred to it.
 - dialing it from automated attendant, voice mail, or DISA.
2. Do one of the following:
 - If calling from your main desktop phone, proceed to step 3.
 - If calling from someone else’s main desktop phone that is designated as a Configuration Assistant user, press the Star button (*), and then enter your extension number.
 - If calling from a phone that is not designated as a Configuration Assistant user, enter your extension number.
 - If transferred to Configuration Assistant or if calling Configuration Assistant from outside the system, enter your extension number.
3. Enter your Station password, and then press **#**.

You may now change the settings for any of the following features:

- Dynamic Extension Express (see [page 31](#))
- DND (see [page 31](#))
- Manual Call Forwarding (see [page 32](#))

Changing the Dynamic Extension Express Settings

NOTE

This feature is available only if the authenticated extension is identified as a Dynamic Extension Express (DEE) user. See “Using Dynamic Extension Express” on [page 25](#) for more information.

To change the DDE settings using Configuration Assistant:

1. Access Configuration Assistant as described in “Accessing Configuration Assistant” on [page 30](#).
2. Follow the voice prompts to change your DEE status (on or off) or program a mobile phone number. When this option is selected, Configuration Assistant first states whether DEE is currently enabled or not (for example, “Dynamic extension is enabled”), and then offers the following DEE functions:
 - Enable (only if DEE is disabled)
 - Disable (only if DEE is enabled)
 - Program mobile phone number [you do not have to enter the Outgoing feature code (8)]
3. Hang up, or press the Star button (*) to return to the main menu.

Changing the DND Settings

See “Using Do-Not-Disturb” on [page 39](#) for more information about using DND.

To change the DND settings using Configuration Assistant:

1. Access Configuration Assistant as described in “Accessing Configuration Assistant” on [page 30](#).
2. Follow the voice prompts to change your DND status (on or off). There is no option to provide a specific DND status message. When this option is selected, Configuration Assistant first states whether DND is currently enabled or not (for example, “Do-Not-Disturb is currently disabled”), and then offers the following DND functions:
 - Enable (only if DND is disabled)
 - Disable (only if DND is enabled)
3. Hang up, or press the Star button (*) to return to the main menu.

Changing the Manual Call Forwarding Settings

See “Manual Call Forwarding” on [page 24](#) for more information about Manual Call Forwarding.

To change the Manual Call Forwarding settings using Configuration Assistant:

1. Access Configuration Assistant as described in “Accessing Configuration Assistant” on [page 30](#).
2. Follow the voice prompts to change your manual call forwarding status (on or off). There is no option to provide a specific call forwarding condition, such as no answer or busy. When this option is selected, Configuration Assistant first states whether call forwarding is currently enabled or not (for example, “Call Forwarding is enabled”) and then offers the following forwarding functions:
 - Forward calls to voice mail
 - Forward calls to an internal extension number
 - Forward calls to an external phone number [you do not have to enter the Outgoing feature code (8)]
 - Disable (only if Call Forwarding is enabled)
3. Hang up, or press the Star button (*) to return to the main menu.

Using Remote Programming

If the Configuration Assistant feature is enabled for your system, Mitel recommends that you use Configuration Assistant instead of the Remote Programming feature described in this section. Configuration Assistant offers an enhanced, voice guided configuration portal that provides easy-to-use, remote access to the Call Forwarding, Dynamic Extension Express, and DND features. See [page 30](#) for using Configuration Assistant.

To use Remote Programming to access these features from another system phone or an external phone, follow the instructions in this section.⁴

NOTE

A Direct Inward System Access (DISA) number is required to use Remote Programming from an external phone. Contact your system administrator for more information.

Changing the Dynamic Extension Express Settings

See “Using Dynamic Extension Express” on [page 25](#) for more information about Dynamic Extension Express.

To enable Dynamic Extension Express using Remote Programming:

1. Do one of the following:
 - Call your DISA number (provided by the system administrator). If necessary, enter your DISA password.
 - Use any telephone on the system.
2. Dial **359**.
3. Enter your extension number.
4. Enter your Station password followed by **#**. See [page 30](#) for details on setting up a Station password for your extension.
5. Dial **363** (Dynamic Extension Express On).

To disable Dynamic Extension Express using Remote Programming:

Follow steps 1. - 4. above, dial **362** (Dynamic Extension Express Off), and then hang up.

4. This feature may or may not be enabled for your system.

Changing the DND Settings

See “Using Do-Not-Disturb” on [page 39](#) for more information about using DND.

To turn on DND using Remote Programming:

1. Do one of the following:
 - Call your DISA number (provided by your system administrator). If necessary, enter your DISA password.
 - Use any phone on the system.
2. Dial **359**.
3. Enter your extension number.
4. Enter your Station password followed by **#**. See [page 30](#) for details on setting up a Station password for your extension.
5. Dial **370**.
6. Enter the DND message number (01 to 20), and then enter the second-line message text (if applicable).

To turn off DND using Remote Programming:

Follow steps 1 through 4, and then dial **371**.

Changing the Manual Call Forwarding Settings

See “Manual Call Forwarding” on [page 24](#) for more information about Manual Call Forwarding.

To turn on Manual Call Forwarding using Remote Programming:

1. Do one of the following:
 - Call your DISA number (provided by your system administrator). If necessary, enter your DISA password.
 - Use any phone on the system.
2. Dial **359**.
3. Enter your extension number.
4. Enter your Station password followed by **#**. See [page 30](#) for details on setting up a Station password for your extension.
5. Dial one of the following Call Forwarding feature codes:
 - **355** (All)
 - **356** (No answer)
 - **357** (Busy)
 - **358** (No Answer/Busy)
6. Enter either an extension number or **8** followed by a telephone number.

To turn off Call Forwarding using Remote Programming:

Dial **355**, and then hang up.

Changing Your Station Password

You can use Remote Programming to change the Station password. See [page 30](#) for details on setting up a Station password for your extension.

To change Your Station password using Remote Programming:

1. Do one of the following:
 - Call your DISA number (provided by your system administrator). If necessary, enter your DISA password.
 - Use any phone on the system.
2. Dial **359**.
3. Enter your extension number.
4. Enter your password followed by **#**.
5. Dial **392**.
6. Enter the new password followed by **#**.
7. Enter the new password again followed by **#**.

Messages

The following sections describe how to use system messaging features, including:

- **Inter-station messages:** Inter-station messages are alerts sent to your telephone by other internal parties, notifying you to contact the party who left the message. The Message button and Message Indicator lamp notify you of the new message. You can then either delete the message or reply to the message, which automatically places a call to the party who left the message.
- **Do-Not-Disturb (DND) messages:** Messages that other internal parties see when your telephone is in DND. See “Using Do-Not-Disturb” on [page 39](#).
- **Reminder messages:** Messages that you can use to notify yourself of upcoming appointments, meetings, and so on. See “Using Reminder Messages” on [page 40](#).
- **Pages:** Announcements sent over phone speakers or external speakers. See “Paging Other System Users” on [page 41](#).
- **Voice messages:** System voice mail messages.

NOTE

Because a variety of voice mail products work with the 5000 CP, this guide does not include voice mail instructions. For voice mail instructions, refer to the voice mail user guide for your system. For example, refer to the *Enterprise Messaging, Basic Voice Mail, and Embedded Voice Mail Card User Guide*, part number 835.3205, or the *Mitel NuPoint Unified Messaging User Guide* (on the [Mitel Web site](http://edocs.mitel.com) (<http://edocs.mitel.com>)). Contact your system administrator for more information about your voice mail system.

Leaving Messages at Other Extensions

You can leave inter-station or voice messages for other internal parties.

To leave an inter-station or voice message for a busy IC extension:

1. Press the **MSG** button.
2. Do one of the following:
 - Hang up to leave an inter-station message.
 - Stay on the line to connect to the message center (usually voice mail).

To leave an inter-station message without placing an internal call:

1. Dial **367**.
2. Enter the extension number and then hang up.

Retrieving Messages

When you have new messages, the Message Indicator lamp and MSG button are lit.

To retrieve messages:

Lift the handset, and then press the **MSG** button. A call is automatically placed to the party or message center that left the message.

Canceling Messages Left at Other Extensions

You can cancel messages left at other extensions.

To cancel a message left at another extension:

1. Dial **366**.
2. Enter the extension number where you left the message.

Deleting Messages

You can delete waiting messages.

NOTE | To delete waiting voice messages, you must connect to your voice mailbox.

To delete inter-station messages:


Dial **368**.

Using Do-Not-Disturb

You can use Do-Not-Disturb (DND) to stop calls and pages to your extension. DND does not block queue callbacks, recalls, and incoming external calls. The following table shows the 20 default DND messages. If your system administrator changes your DND messages, you can record the new messages in the “New Message” column for reference.

Code	Default Message	New Message	Code	Default Message	New Message
01	Do-Not-Disturb		11	Out of Town 'Til	
02	Leave a Message		12	Out of Office	
03	In Meeting Until		13	Out Until	
04	In Meeting		14	With a Client	
05	On Vacation/ Holiday 'Til		15	With a Guest	
06	On Vacation/ Holiday		16	Unavailable	
07	Call Me At		17	In Conference	
08	At the Doctor		18	Away from Desk	
09	On a Trip		19	Gone Home	
10	On Break		20	Out to Lunch	

To turn on DND:

1. Press the **DND** button.
2. Enter the two-digit number for the DND message from the table above.
3. Press  (Speaker) or lift and replace the handset.

To turn off DND:

Press the **DND** button.

Using Reminder Messages

You can use Reminder messages to alert you at a selected time, up to 24 hours in advance. At the selected time, the Reminder message signals you with eight short tones even if you are on a call. The following table shows the 20 default Reminder messages. If your system administrator changes your Reminder messages, you can record the new messages in the “New Message” column for reference.

Code	Default Message	New Message	Code	Default Message	New Message
01	Meeting		11	Call Engineering	
02	Staff Meeting		12	Call Marketing	
03	Sales Meeting		13	Call Accounting	
04	Cancel Meeting		14	Cancel DND	
05	Appointment		15	Cancel Call Fwd	
06	Place Call		16	Take Medication	
07	Call Client		17	Make Reservation	
08	Call Customer		18	Review Schedule	
09	Call Home		19	Lunch	
10	Call Corporate		20	Reminder	

To set a Reminder message:

1. With the handset on-hook, dial **305**.
2. Enter the two-digit number for the Reminder message from the previous table.
3. Press # to select the message.
4. Enter the time you wish to receive the message in hours and minutes (for example, **0900** or **900** for **9:00**) and then press #.

If your system is set for 24-hour format, enter the applicable time (1400 = 2:00 P.M.).

*If your system is set for 12-hour format, press **1** for A.M. or **2** for P.M.*

To cancel all Reminder message requests:

With the handset on-hook, dial **306**.

To clear a received Reminder message:

With the handset on-hook, press *****.

Paging Other System Users

You can place page announcements through phone speakers or external speakers (if applicable). Your system may use page zones to prevent announcements from transmitting through every phone in the system. Each page zone contains a different combination of extensions and external paging equipment.

Contact your system administrator for page zone information. You can use the following table to save the page zone information for future reference.

Page Zone Name	Number	Description

Placing a Page Announcement

The following instructions describe how to place a page announcement.

To place a page announcement:

1. Press the **PAGE** button.
2. Enter the page-zone number (**0** to **9**).
3. After the tone, make your announcement, and then hang up.

Enabling or Disabling the Page Feature

You can enable or disable the Page feature for your extension. If your extension is assigned to more than one page zone, the Page on and off feature code enables or disables your extension for all pages zone (you cannot select individual zones).

To enable or disable paging for your telephone:

Dial **325** (on/off toggle).

Hunt Groups

Hunt groups are groups of internal parties (agents) who share a common (hunt group) extension number. Calls can either be placed to the hunt group (using the hunt group extension number) or to a specific agent (using the agent's extension number). Hunt groups are programmed by the system administrator.

Hunt groups types are either "UCD" or "ACD."

- **UCD Hunt Groups:** Uniform Call Distribution (UCD) agents do not log in to the hunt group to receive calls.
- **ACD Hunt Groups:** Automatic Call Distribution (ACD) agents log in to the ACD hunt group to receive calls. Calls are distributed by either Agent IDs or extensions:
 - *Agent IDs:* Each agent is assigned an Agent ID number for logging in to the hunt group (see the next section). Hunt group calls are distributed to logged-in agents according to their Agent ID number instead of their extension number. Agents can log in to any ACD hunt group phone.
 - *Extensions:* Hunt group members do not use Agent IDs, and calls are distributed to phones where the agents are logged in.

Logging in to ACD Hunt Groups

You must log in to an ACD hunt group to receive hunt group calls. To stop calls, you either log out of the ACD hunt group or divert calls. See "Diverting Hunt Group Calls" on [page 44](#).

NOTES

Only one agent can be logged in to a phone.

If the ACD Agent ID Automatic Connect option is enabled for your hunt group and you are using a headset, you are automatically connected to waiting calls when you log in. The first call you receive after you log in rings until you answer it; however, you are automatically connected to subsequent calls.

To log in to or out of all ACD hunt groups in which you are a member:

Dial **328** to log in followed by your Agent ID, if necessary. You hear a login confirmation tone. To log out, dial **328** again followed by your Agent ID, if necessary.

To log in to one or more ACD hunt groups:

1. With or without your handset lifted, dial **326**.
2. Do one of the following:
 - Enter the ACD hunt group number.
 - Press **#** to log in to all of your ACD hunt groups.
3. Enter your Agent ID (if applicable), or press **#** if you do not have an agent ID.

Logging out of ACD Hunt Groups

You can log out of all ACD hunt groups at once or log out of each hunt group one at a time.

To log out of one or more ACD hunt group:

Do one of the following:

- Dial **328** to log out of all of your ACD hunt groups.
- Dial **327** to log out of one hunt group at a time.

Stopping the ACD Hunt Group Wrap-up Timer

Each time you end an ACD hunt group call, a wrap-up timer starts. Until this timer expires, you will not receive another hunt group call. However, you can stop the wrap-up timer to allow calls to your extension.

To stop the wrap-up timer:

With the handset on-hook, dial **329**.

Other Hunt Group Features

The following features can be used by ACD or UCD hunt groups.

Requesting Agent Help

You can use Agent Help to request help from a designated “Agent Help Extension” (usually your supervisor) during a call. When your request call rings at the Agent Help Extension, the supervisor can join the call or reject the request.

NOTE

Agent Help is not supported on peer-to-peer (P2P) calls. Contact your system administrator for more information.

To use Agent Help:

1. While you are on a hunt group call, press ∞ (Special), and then dial **375**.

NOTE

If you hear repeating tones, one of the following has occurred:

- The feature is not available at your telephone.
- You already have four parties in your call.
- Not enough system circuits are currently available.
- The Agent Help Extension is in DND.

2. If not preprogrammed, dial the Agent Help extension number.

Diverting Hunt Group Calls

You can temporarily divert hunt group calls, preventing hunt group calls to your extension.

To divert hunt group calls:

Dial **324** to divert calls. Dial **324** again to program your telephone to accept calls.

Hunt Group Supervisor Features

The following features can be used by hunt group supervisors only.

Accepting or Rejecting Agent Help Calls

Supervisors can accept or reject Agent Help calls.

To accept an Agent Help request:

Answer as usual. Your microphone is automatically muted.

To reject an Agent Help request:

Dial **376**.

Monitoring Calls

You can use Station Monitor to connect to a hunt-group call and hear both parties, but you cannot be heard by either one. Station Monitor stops if the hunt group member terminates or transfers the call. You can barge-in to or “steal” monitored calls, as described in the following sections. You can also record the call. See “Using Record-A-Call” on [page 28](#) for more information about recording calls.

NOTE

Station Monitor is not supported on peer-to-peer (P2P) calls. Contact your system administrator for more information.

To use Station Monitor:

Dial **321**, and then enter the extension number. Monitored hunt group members may hear an “activation tone” when the feature is activated.

Stealing Hunt Group Calls

While monitoring a hunt group call, you can “steal” the call from the hunt group member, which disconnects the call from the agent and transfers the call to your extension.

To steal a hunt group call:

Dial **387**.

Using Barge-In

While monitoring a hunt group call, you can use Barge-In to join the call.

To monitor and/or barge in on a call:

1. **To use the speakerphone:** While on hook, dial **321**. You hear a confirmation tone.
To use the handset: Lift the handset, and then dial **321**. You hear a confirmation tone.
2. Dial the extension number (or press the lit station speed-dial or DSS/BLF button) of the station to be monitored. You are automatically connected to the call.
3. While silent monitoring a call, you have the following options:
 - *To barge in on a call*, dial **386**. While on a call, you can monitor, record, or steal the call by entering the appropriate feature code.
To return to silent monitoring of the call, dial **386** again.
To record the call, dial **385**.
 - *To record a call*, dial **385**. While on a call, you can monitor or steal the call by entering the appropriate feature code.
To stop recording the call, dial **385** again.
 - *To steal a call*, dial **387**. After the supervisor steals the call, the call becomes a regular call. While on a call, you can record the call by dialing **385**.
 - *To join and record a call*, dial **386**, and then dial **385**. While on a call, the supervisor can monitor, stop recording, or steal the call by entering the appropriate feature code.
To stop recording the call, dial **385** again.
4. **To terminate any of the features:** *If off hook*, hang up or enter the specific feature code of the feature you want to terminate. *If on hook*, press the **Speaker** button or enter the specific feature code of the feature you want to terminate.

Troubleshooting

The following sections can help you solve problems that you may be experiencing with your telephone. Troubleshooting topics include:

- **Contact Information:** Information about system administrator contacts.
- **Troubleshooting Tips:** Possible problems and methods to solve them.

Contact Information

Your system administrator can help you with items such as changing your settings or modifying phone features. System administrator duties include:

- Adding new user accounts.
- Setting the date and time.
- Programming System Speed-Dial numbers.
- Making database changes, such as changing user names and extension numbers.

Contact your system administrator with questions that are not covered in this user guide. If you need further assistance, you can find provider information on the [Mitel Web site](http://www.mitel.com) (www.mitel.com). All sales, service, and support are coordinated at the local level.

Troubleshooting Tips

The following table includes troubleshooting tips for phone and system features.

NOTE	You can often correct problems that you may be experiencing by resetting the telephone to the default settings. See “Resetting the Telephone to the Default Settings” on page 13 .
-------------	--

Problem	Possible Solution
The telephone is not working properly.	Contact your system administrator.
I cannot use one or more of the features described in this guide.	The feature may not be enabled. Contact your system administrator for more information.
I cannot program System Speed-Dial numbers.	Your system administrator programs System Speed Dial numbers.
I am experiencing audio problems on my phone such as echo, distorted sound, or choppiness.	Contact your system administrator if you are having audio problems.
I cannot use the local telephone company star codes (for example, *82, *69) when I press the Outgoing button or use the Outgoing Call access code (8) when calling an external number.	Rather than pressing the Outgoing button or 8 to access an outside line, you must dial a Select Line Group number before you can use the star codes. For example, if your system is using the default Select Line Group numbers, dial 92001 to access that line. After you have dial tone, you can dial the star code and the number.
I cannot use the Agent Help, Record-a-Call, or Station Monitor feature.	If your system uses Peer-to-Peer (P2P) audio, you cannot use these features when you are on a P2P call. Contact your system administrator for more information.

Problem	Possible Solution
I cannot program a Station Speed Dial number to the button I want.	Before assigning the speed-dial number to a programmable button, you must store the number with either a Station or System Speed-Dial code.
When I try to use the Dynamic Extension Express – Handoff feature (388), I hear reorder tone.	This indicates that the call cannot be handed off because one of the following may have occurred: <ul style="list-style-type: none"><li data-bbox="846 422 1398 506">• You tried to use the Handoff feature on a call that has not been routed by Dynamic Extension Express.<li data-bbox="846 516 1398 575">• You tried to use the Handoff feature on a call that the system has not yet recognized as a valid call.<li data-bbox="846 585 1398 674">• You tried to use the Handoff feature on an unsupported extension. The Handoff feature is supported on your main extension only.<li data-bbox="846 684 1398 772">• You tried to use the Handoff feature on a phantom extension. The Handoff feature is not supported on phantom extensions.<li data-bbox="846 783 1398 842">• You entered the handoff feature code at the exact time the other party on the call disconnected.<li data-bbox="846 852 1398 879">• The call was terminated for some reason.

Index

A

About Your Telephone 2

Accepting or Rejecting Agent Help Calls 45

Accessing Configuration Assistant 30

Account Codes 19

Account Codes, using 19

ACD Hunt Group Wrap-Up Timer, stopping 44

ACD Hunt Group Wrap-up Timer, stopping 44

ACD Hunt Groups

- login in 43
- logging in 43
- logging out 44

Agent Help

- accepting or rejecting 45
- requesting 44

Agent, ACD Hunt Group 43

All Parties on Hold, placing 27

Angle, adjusting 7

Angle, viewing, adjusting 7

Audio Problems 47

Automatic Access, using 15

Automatic Call Access 15

Automatic Call Access, using 15

Automatic Trunk Answer 16

Automatic Trunk Answer, using 16

B

Background Music, listening 8

Barge-In 46

Barge-In, using 46

Buttons Feature 4

C

Call Forward

- manual 24
- system 24
- using 24

Callback (Queuing the Telephone), requesting 16

Callback, requesting (queuing the telephone) 16

Calls

answering 15

camping-on to telephone 17

conference, placing 27

external, placing 17

forwarding 24

muting the microphone 22

picking up (reverse transferring) 23

placing 16

placing internal (IC) 16

recording 28

redirecting 15

stealing 45

telephone, queuing for 16

transferring 22

waiting 15

waiting, answering 15

Calls On Hold, placing 22

Calls to External Numbers, transferring 23

Calls to Other Extensions, transferring 23

Camp-on 17

Camp-On, using 17

Canceling Messages Left at Other Extensions 38

Codes

- account 19
- default system access 10
- feature, default 10
- Outgoing Call access 17

Comfort and Safety Tips 5

Conference

- dropping out of 27
- ending 27
- transferring 27

Conference Calls

- adding a party to 27
- dropping out of 27
- ending 27
- placing 27
- transferring 27

Conference Calls, placing 27

Conference Party, adding 27

Conference, transferring 27

Configuration Assistant 30

Contact Information 47

D

Default

- access codes 10
- feature codes 10
- settings, returning the telephone to 13
- system access codes 10

Default Access Codes 10

Default Feature Codes 10

Dialpad Buttons 3

DND Settings, changing 31, 34

Do-Not-Disturb 39

Do-Not-Disturb, using 39

Door Relay, activating 13

Dropping Out of a Conference 27

Dynamic Extension Express 25

- enabling and disabling 26
- handoff 26
- settings, changing 31, 33

E

Emergency Calls

- placing 16

Emergency Calls, placing 16

Enabling or Disabling the Page Feature 41

Ending a Conference and Placing all Parties on Hold 27

Enhanced Speakerphone Mode 21

Entering a Hookflash 22

Error Tones, telephone 5

Extension Numbers 10

External Calls, placing 17

External Numbers, redialing 17

F

Feature

- buttons 4
- codes, using 10
- descriptions 3

Feature Buttons 4

Feature Descriptions 3

Forwarding Calls 24

G

Group Listen 28

Group Listen, using 28

H

Handset 3

- off-hook 5
- off-hook, on-hook 5
- on-hook 5

Handsfree Mode 21

- overriding 21
- using 21

Headset

- instructions 5
- using 5

Headset Instructions 5

Hold

- individual 22
- system 22

Hookflash, entering 22

Hunt Group Calls

- diverting 44
- stealing 45

Hunt Group Calls, diverting 44

Hunt Group Supervisor Features 45

Hunt Groups

- Agent Help, accepting or rejecting 45
- Agent Help, requesting 44
- agent IDs 43
- Automatic Call Distribution (ACD) 43
- Barge-In, using 46
- calls
 - diverting 44
 - monitoring 45
 - stealing 45
- logging out of 44
- types 43
- Uniform Call Distribution (UCD) 43
- wrap-up timer 44

I

Individual Hold, using 22

Internal Calls, placing 16

Inter-Station Messages

- canceling 38
- deleting 38

K

Keymaps

- changing 13
- switching 13

M

- Manual Call Forwarding 24
- Manual Call Forwarding Settings
 - changing 32, 34
- Members, hunt group 43
- Message Indicator Lamp 3
- Messages
 - canceling 38
 - deleting 38
 - Do-Not-Disturb 39
 - leaving 37
 - pages 41
 - reminder 40
 - replying to 37
 - retrieving 37
 - using 37
 - voice, listening to 37
- Messages at Other Extensions, leaving 37
- Messages Left at Other Extensions, canceling 38
- Messages, deleting 38
- Messages, retrieving 37
- Microphone, muting 22
- Monitoring Calls 45
- Monitoring Calls, monitoring 45
- Music, listening 8
- Mute 22
- Mute, using 22

N

- Number, redialing 17
- Numbers
 - redialing 17
 - redialing external 17

O

- Off-Hook 5
- On-Hook 5
- Other Hunt Group Features 44
- Other System Users, paging 41
- Outgoing Call Access Code 17
- Outside Line Access Codes 10

P

- Page Announcement, placing 41
- Page Feature, enabling or disabling 41
- Paging
 - enabling or disabling 41
 - Other System Users 41
 - using 41
- Password, Remote Programming
 - changing 35
 - entering 30
- Placing External Calls, placing 17
- Programmable Buttons 3, 9
 - assigning 9
 - resetting 12
 - using 9

R

- Record-A-Call 28
- Record-A-Call, using 28
- Reminder Messages 40
- Reminder Messages, using 40
- Remote Programming 33
 - change DND settings , using 31, 34
 - change the password, using 35
 - Dynamic Extension Express 33
 - forward calls, using 31, 32, 34
 - password
 - changing 35
 - entering 30
 - using 33
- Reverse Transfer 23
- Reverse Transfer (Call Pickup), using 23
- Ring Intercom Always 21
- Ring Intercom Always, using 21
- Ring Message Indicator 3
- Ring Tone
 - changing 8
 - selecting 8

S

- Secondary Extension Buttons 29
- Settings, returning to default 13
- Signals, telephone 5
- Speakerphone
 - Group Listen, using 28
 - handsfree calls 21

Index

Speed Dial 18

- entries to programmable buttons, assigning 19
- entries, deleting 18
- station, using 18
- system, using 18
- using 18

Speed-Dial Numbers to Programmable Buttons, assigning 19

STAR Codes, telephone company 47

Station Messages

- leaving 37
- replying to 37

Station Monitor, using 45

Station Password

- changing 30, 35

Station Speed Dial 18

- numbers

 - deleting 18
 - dialing 18
 - storing 18

- using 18

Station Speed-Dial Numbers

- deleting 18
- dialing 18
- storing 18

Switching Keymaps 13

System

- forwarding 24
- hold 22

System Forwarding 24

System Speed Dial 18

T

Telephone

- changing volume levels 7
- comfort and safety 5
- default settings, returning to 13
- error tones 5
- features

 - dialpad buttons 3
 - feature buttons 4
 - programmable buttons 9
 - Ring/Message Indicator 3

- ring tone, selecting 8
- signals 5
- viewing angle, changing 7

Telephone Signals 5

Telephone to the Default Settings, resetting 13

Telephone, queuing 16

Tips

- comfort and safety 5
- troubleshooting 47

V

Voice Messages

- deleting 38
- leaving 37
- listening to 37

Volume 3

Volume Levels, changing 7

W

Waiting Calls, answering 15

Welcome 1

Wrap-Up Timer, stopping 44

Part No. 550.8114
Issue 14, June 2010

